



5602 Greenbay Road  
Kenosha, WI. 53144  
Phone: (262)654-3222  
Email: jumpnjaxinc@hotmail.com  
Website: JumpNJax.com

## Cotton Candy Machine Operating Instructions

### Instructions and Rules

1. **NEVER TOUCH THE MIDDLE SPINNER BEFORE, WHILE IN USE, OR DURING COOL DOWN PERIOD IT WILL CAUSE SERIOUS BURNS TO THE SKIN.**
2. **Keep all children away from the spinning mechanism in the center. IT IS EXTREMELY HOT. AND MAY CAUSE SERIOUS INJURY.**
3. Make sure stainless steel bowl is in the lock down position. There are tabs underneath the stainless steel bowl that need to be latched.
4. Make sure the cart or unit is on a level surface.
5. Plug in the Cotton Candy Machine.
6. Turn on the power switch **only** and let the machine run for a minimum of 2 minutes before adding any sugar (floss).
7. Turn the heat switch on high and let the machine warm up for 5 minutes.
8. Take a paper cone and roll the tip (the open cone end) on a clean wet cloth.
9. With the cone in one hand and the sugar scoop in the other, scoop one scoop of sugar (floss) from the container with the measuring scoop provided. **NEVER MORE THAN ONE SCOOP OF SUGAR AT A TIME!!**
10. Pour one scoop of sugar (floss) into the center hole of the spinning center.
11. Start spinning the paper cone in your hand with your fingers in one place and slowly move going around the bowl on the inside while spinning it with your fingers to capture all stringed cotton candy. Do this until the cotton candy stops coming out of the center.
12. Now it's time to make the next one. Have cone and scoop ready. Repeat process until all your guests are served. Do not add any sugar (floss) if there is no one left to serve.
13. If you smell burning sugar, you will have to adjust the heat switch by backing off the temperature accordingly.
14. **ALLOW ALL SUGAR TO BE SPUN OUT BEFORE ADDING MORE!!**
15. **NEVER TOUCH THE SPINNER WHILE IN USE OR DURING COOL DOWN PERIOD IT WILL CAUSE SERIOUS BURNS TO THE SKIN.**

### Cleaning Instructions

**CAUTION: THE FOLLOWING PROCESS WILL CAUSE THE UNIT TO PRODUCE HOT STEAM AS IT CLEANS THE UNIT. KEEP YOUR FACE AND ANY EXPOSED SKIN AWAY FROM THE CENTER OF THE UNIT.**

#### **NEVER USE SOAP WHILE CLEANING!**

1. While the machine is still running and hot, fill the sugar (floss) scoop with water and slowly pour, just a little bit of water at a time, into the center of the spinning unit. Catch any excess floss with a cone.
2. Repeat as necessary until clean and no more cotton candy strings come out.
3. Turn off all switches and allow unit to cool.
4. Wipe down the spinner and steel bowl with a clean cloth.

The renter takes full responsibility for the Cotton Candy Machine's safe use and following all of the instructions for safe uses that are not limited to or all inclusive of the rules stated above. Jump N' Jax Inc. is not liable for any misuse of the product or injury that may result from it's misuse or for not following cautions stated. In the event the unit is damaged or vandalized renter is responsible for the repair or replacement of rented unit not to exceed \$1000 dollars.

I have read and understand this agreement,

Signature: \_\_\_\_\_ Date: \_\_\_\_\_