



5602 Greenbay Road
Kenosha, WI. 53144
Phone: (262)654-3222
Email: jumpnjaxinc@hotmail.com
Website: JumpNJax.com

Popcorn Machine Operating Instructions

Instructions and Rules

1. **Be sure equipment is connected to a properly grounded 120 Volt power supply with 15 AMP Circuit.**
2. **BE CAUTIOUS and keep all children away from the heat lamp and popcorn basket. IT WILL CAUSE SERIOUS INJURY.**
3. Turn the power switch to the ON position and/or heat switch and let it heat up for 3-5 minutes. Some units have 2 switches others just one.
4. Add the butter mixture (yellow) to the metal popcorn basket.
5. Pour the popcorn seeds from the other half of the pouch into the metal popcorn basket.
6. Close the lid of the basket, the doors of the unit, and wait for the kernels to pop.
7. The Kernels will pop out of the basket and drop into the holding chamber below it.
8. When the majority of all the kernels have popped, open the door, and tip the basket to pour out any excess kernels that are remaining in the basket.
9. Repeat steps 4 through 8 for another batch of popcorn. Repeat again and again until you have enough quantity for your party.
10. Leave the warming light on to keep the popcorn warm. You may turn off the popcorn basket churning switch if the unit is equipped with a separate switch.
11. Fill the popcorn bags with the scoop provided.
12. Enjoy your theatre popcorn from the bags provided

CLEANING

CAUTION THE UNIT WILL BE HOT AND CAN CAUSE SERIOUS INJURY.

1. Turn off the POWER switch.
2. Unplug the power cord from the electrical outlet.
3. **Let the unit cool down BASKET IS VERY HOT USE EXTREME CAUTION**
4. Pour the remaining popcorn and un-popped kernels out of the unit into a trashcan or bowl.
5. Using a clean damp cloth, wipe down the following items:
 - ❖ The inner glass surface of the popcorn holding area
 - ❖ Remove the metal popcorn popping basket by unplugging it from the socket on the inner top of the machine and pushing the basket up and pull sideways.
 - ❖ Wipe the inside of the popcorn basket and the outer part of the basket
 - ❖ Wipe all interior and exterior surfaces.

EXTREME CAUTION!! POPCORN BASKET GETS EXTREMELY HOT DURING OPERATION!

Please be careful to keep all body parts and any objects such as plastic scoops or spoons away from the hot basket while the machine is on.

The renter takes full responsibility for the Popcorn Machine's safe use and for following all of the instructions for safe uses that are not limited to or all inclusive of the rules stated above. Jump N' Jax Inc. is not liable for any misuse of the product or injury that may result from it's misuse or blatant dis-regard and not following the cautions stated. In the event the unit is damaged or vandalized renter is responsible for the repair or replacement of rented unit not to exceed \$500 dollars.

Thank You, YOUR FUN IS OUR BUSINESS

I have read and understand this agreement,

Signature: _____ Date: _____